


Simple care guidelines

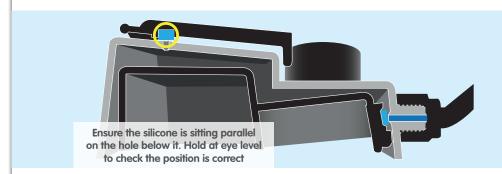

Ensuring that the AQUAvalve5 floods and drains correctly

- Making sure your AQUAvalve5 floods and drains correctly is simply achieved and only takes a few seconds.
- Hold the AQUAvalve5 at eye level so that you can see the silicone fitted to the top float resting on the hole below it.
- The silicone must create a tight seal when touching the hole.
- If it looks like it is not sitting parallel on the hole below, simply lift the top float and apply pressure to one side of the silicone, drop the float and hold at eye level again. Repeat the procedure if necessary.

Care and maintenance



The AQUAvalve5 is easily disassembled. The top float will slide all the way across and the bottom float is unclipped from its pivoting position. The circular discs fitted to the top float can also be removed by using pliers to grip the raised point.

At this point is it advisable to remove the silicones to avoid them being lost.

It is also handy to have a paper clip or pipe cleaner to hand so that you can push it through the AQUAvalve5 nozzle, this will remove any lime scale build up that may have occurred during the growing season.

Blowing through the AQUAvalve5 nozzle will also help to remove any build up. Do not under any circumstances use a drill & drill bit to clear the AQUAvalve5 nozzle.

This will potentially damage the AQUAvalve5 beyond repair.

Your Auto9 XL Set-up Guidelines



Allow your
Plants
to establish
before turning your
system on.



Auto 9 XL FlexiPot contents

- 1x Auto 9 XL tray, lid & access cover
- 1x AQUAvalve5
- 1x AQUAvalve cover
- 1x 9mm top hat grommet
- 1x metre 9mm piping
- 9x 20 L FlexiPot
- 9x FlexiPot PotSock





1x Auto 9 XL tray, lid & access cover

Auto 9 XL contents

- 1x AQUAvalve5
- 1x AQUAvalve cover
- 1x 9mm top hat arommet
- 1x metre 9mm piping
- 9x 25 ltr XL solid pot
- 9x root control disc



Required Reservoir Capacity





FlexiTank and FlexiTank Pro are the only collapsible reservoirs that AutoPot recommend for use with Auto 9 XL Systems. A minimum 100ltr reservoir is required per unit.

FlexiTank or FlexiTank Pro Capacity	Auto 9 XL System Size
FlexiTank / Pro 100ltr	1x Auto 9 XL
FlexiTank / Pro 225ltr	2x Auto 9 XL
FlexiTank / Pro 400ltr	4x Auto 9 XL
FlexiTank 750ltr	8x Auto 9 XL
FlexiTank 1000ltr	10x Auto 9 XL












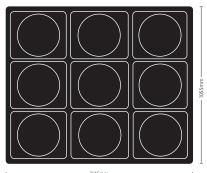

Advice

- Please note that multiple FlexiPots may increase room humidity due to the exposed surfaces of the fabric pots.
- Pot up your plants, water through, then allow your plants to establish in the pots for a period of 10 to 14 days before turning your system on. This will encourage a stronger and healthier root system.
- Always raise your reservoir to a minimum of 150mm above the highest AQUAvalve and re-fill the reservoir when there is approximately a 1/3 of the solution left - NEVER ALLOW THE RESERVOIR TO RUN EMPTY.
- With AQUAvalve5 systems mineral or organic fertilisers may be fed via the reservoir and pipework. Organic fertilisers will require a water pump in the reservoir running for 15 mins every 2 hrs and cleaning of the reservoir. pump, and filter each time the reservoir empties. Flush pipework with plain water every time the reservoir empties.
- Clean all substrate from the bottom and sides of the pots before placing in trays to ensure AQUAvalve functionality.
- Always use free draining substrates, for example: soil/perlite, coco/perlite, soil/clay pebbles, coco/clay pebbles, rockwool/clay pebbles

Auto 9 XL FlexiPot Setup



Fit the FlexiPot PotSock over the base of each FlexiPot



1b

Place circular root control disc gold face down in the pot.



Water through pot and allow to drain outside the tray.





Fill FlexiPot with medium and pot up plants.

Water through pot and allow to drain outside the tray.

Common to both:



Push 9mm top hat grommet into the port in the tray wall.

Thread 9mm pipe into the tray through the grommet.



Auto 9 XL Setup

Remove AQUAvalve collar. Push 9mm pipe through collar and attach to AQUAvalve nozzle

Rescrew collar - DON'T overturn... when you feel it grip **STOP**.



Cut 9mm pipe to appropriate lenath.

Connect via 9mm / 16mm fittings to a filter (not included).

Connect filter to reservoir. Leave tap off.



Place AQUAvalve cover over the AQUAvalve.

The AQUAvalve and cover should be placed directly onto the tray.



Remove any slack from 9mm pipe by drawina excess pipe out of the tray.

Ensure that the circular spirit level indicates the tray is level, adjust if required.



Make sure the system is clean and free of debris.

Place the lid on top of the tray. Insert the pots. Place the access cover over the valve.

Allow your plants to establish for 10-14 days before turning system on

